

Directed

SMART**START**[™]



5000-series
Security and Remote Start System

Owner's Guide

Congratulations

Congratulations on the purchase of your state-of-the-art security and remote start system. Reading this Owner's Guide prior to using your system will help maximize the use of your system and its many features. For more information please visit us online at:


www.directed.com/SmartStart

For any additional questions please contact your authorized Directed dealer or contact Directed at **1-800-753-0600**. Additional support is also available at:

<http://support.directed.com>

What's included

- One 4-button 1-way remote control
- Your warranty registration
- Quick reference card
- This owner's guide

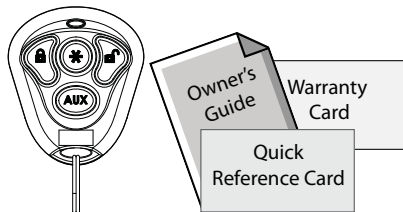

Important information

Government Regulations and Safety information



Read the *Government Regulations* and *Warning! Safety First* sections of this manual prior to operating this system.

Warning! Failure to heed this information can result in death, personal injury or property damage and may also result in the illegal use of the system beyond its intended purpose.

Your Warranty

Your system comes with a warranty. Please make sure you receive the warranty registration card and proof of purchase from your dealer indicating the product was installed by an authorized Directed dealer. Your product warranty must be validated within 10 days of purchase. You can validate online at: www.prodregister.com/directed or complete and return the warranty registration card.

Replacement Remote Controls

If additional remote controls are desired, please see your authorized dealer or visit us at www.directedstore.com to order. The supplied remote control is part number 474T.

Contents

Congratulations	iii
What's included.....	iii
Important information	iv
Your Warranty.....	iv
Replacement Remote Controls.....	iv
Getting Started	3
System Maintenance	3
Battery Replacement.....	3
1-way Remote Control	3
Basic Commands	4
Arm/Lock	4
Disarm/Unlock.....	4
AUX.....	4
Remote Start.....	5
Advanced Commands	6
Additional Auxiliary functions.....	6
Timer mode.....	6
Short-run turbo mode.....	6
Optional rear window defogger	6
Temperature Start Mode	7
Remote and System operations	8
Passive arming/locking	8
Warn away [®] response.....	8
Triggered response	8
Multi-level security arming.....	9
Arming while driving.....	10
High security disarm	10
System Override.....	11
Valet mode	12
Panic Mode	12
Remote start	12
Optional rear window defogger	14
Timer Mode	14
Short Run/Turbo Mode.....	15
Temperature Start Mode	15
Valet Take-Over	16
Safety features.....	17
Starter-anti-grind circuitry	17
Disabling the remote start system	17
Shut down inputs	17
Diagnostics	18

Arming diagnostics	18
Disarming diagnostics	18
Nuisance Prevention® Circuitry	18
Programming options.....	21
Government Regulations	24
Warning! Safety First.....	25
Caution	26
Patent Information	27
Limited lifetime consumer warranty	28

Getting Started


System Maintenance

The system requires no specific maintenance beyond battery replacement for the remote controls. Your 1-way remote control is powered by a coin cell battery (CR-2032) that can be purchased at most retailers. The operating range diminishes as the battery weakens.

Battery Replacement

Locate the small slot on the side of the remote control. Insert a small slotted screwdriver or equivalent tool into slot and pry the case apart. Replace battery while verifying the correct polarity and then snap case together.

1-way Remote Control

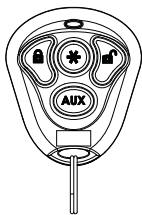

Feature	Description
Transmit LED	On (flashes) during remote control activity
Command buttons (4)	Used to perform arming/locking, disarming/unlocking, auxiliary channel and remote start commands

Basic Commands

Arm/Lock

Press and release 


The alarm arms, doors lock (if connected), and the siren/horn sounds and parking lights flash once. If Valet mode* is On, the doors lock. Exit Valet mode to arm/lock the alarm normally.

To Arm/lock and Panic

Press and hold 

The alarm Arms (or Locks in Valet) and, after 2 seconds, sounds the siren/horn and flashes the parking lights.

Disarm/Unlock

Press and release 

The alarm disarms, doors unlock (if connected), and the siren/horn sounds and parking lights flash twice. Turns panic off if on. If Valet mode* is On, the doors unlock.

AUX

Press and release **AUX**

Perform before the Arm/lock or Disarm/unlock command to use the remote control in **Silent Mode™**.

Note: The Warn away response to lighter impacts is bypassed if the system is armed using silent mode. this ensures that no chirps are emitted by the siren in an area you want chirp-free but the system is fully capable of triggering.

For optional function (trunk release)

Press and hold **AUX**

Activates the Aux output, such as trunk release or an expansion function that you have added to your system. The auxiliary output controls: _____.

Remote Start


Press and release 

Activates (or if On, deactivates) the remote starter. The engine and parking lights turn On.

* See *Remote and System Operations* for details.

Advanced Commands

Additional Auxiliary functions.

Press  and **AUX** buttons simultaneously

Activates an optional auxiliary convenience or expansion function that you have added to your system.

The auxiliary output controls _____

Press  and **AUX** buttons simultaneously

Activates an optional auxiliary convenience or expansion function that you have added to your system.

The auxiliary output controls _____

Press  and  buttons simultaneously

Activates an optional auxiliary convenience or expansion function that you have added to your system.

The auxiliary output controls _____

Timer mode

Press  and  buttons simultaneously



Activates timer mode.

Short-run turbo mode

Press  and **AUX** buttons simultaneously

Activates short-run timer mode.

Optional rear window defogger

Press  and  and **AUX** buttons simultaneously

Activates the optional Rear window defogger. The parking lights flash two times and the rear defogger is no longer active when the vehicle

is remote started. When the same procedure is repeated, the defogger activates and the parking lights flash three times. If the vehicle interior temperature is greater than 55°F when the remote start is activated, the rear defogger does not turn on.

Temperature Start Mode

Press  and  and **AUX** buttons simultaneously

Activates the Temperature Start mode. The parking lights flash fast four times to confirm activation. The engine does not start once activated, it starts when the vehicle interior temperature drops below 0°F.



Warning! Car should be parked in a well ventilated area when using this feature.

Deactivate Temperature Start mode by pressing the same buttons again or turning the vehicle ignition on. The parking lights flash slowly four times to confirm deactivation.

Remote and System operations

Passive arming/locking

The system can be programmed to arm/lock itself automatically (called passive arming/locking). If the system is programmed for passive arming/locking, it will automatically arm/lock 30 seconds after the ignition is turned off and the system detects that you have left the vehicle by opening and closing a door. Whenever the system is in its 30-second passive arming/locking countdown, the status LED will flash twice as fast as it does when the system is armed/locked. At the 20-second point of the countdown, the siren/horn will sound to indicate that the system is about to arm/lock. At the 30-second point, the parking lights will flash to indicate that the system is armed/locked.

Note: If any protected entry point (such as a door or a switch-protected trunk or hood) is open, the system will not passively arm/lock (unless forced passive arming/locking is programmed on). See Programming Options section in the expanded version of this manual online at www.automatecarsecurity.com..

Warn away® response

A Warn Away Response consists of an alarm page along with the responses described below.

- Shock Sensor - Light impacts to the vehicle will flash the vehicle lights and sound the siren/horn for a few seconds.



Triggered response

A Triggered Response can be activated by any of the triggers listed below. The default Triggered Response duration is 30 seconds but can be programmed from 1-180 seconds by your installer.


- Shock Sensor Trigger - Heavy impacts to the vehicle will instantly sound the siren/horn and flash the lights for the programmed duration and report Zone 2.
- Door Trigger - If a door is opened the siren/horn will sound and lights flash for three seconds, then the siren/horn will sound continuously and the lights will flash for the programmed duration and report Zone 3. The three seconds allow the user time to disarm/unlock the system with a minimum of noise should a door be opened inadvertently while the system is armed/locked.
- Hood Trigger - Opening the hood will sound the siren/horn, flash the lights for the programmed duration, and report Zone 1.
- Trunk Trigger - Opening the trunk (if connected) will instantly sound the siren/horn and flash the lights for the programmed duration and report Zone 4.
- Ignition Trigger - Turning on the ignition key will trip the same progressive response as the door trigger and report Zone 5.


Multi-level security arming

Multi-Level Security Arming allows you to select which of the system's inputs or sensors will be active and which will be bypassed when the system is armed.


Pressing  again within five seconds of arming the system activates the Multi-level security feature. Each time  is pressed, a different security level is selected.


To select the security levels:


Press  once: The siren chirps once. The system is armed with all zones active.

Press  a second time within five seconds. The siren chirps twice fol-

lowed by a long chirp. Zone 2 is now bypassed.



Press  a third time within five seconds. The siren chirps three times followed by a long chirp. Zone 4 is now bypassed.

Press  a fourth time within five seconds. The siren chirps four times followed by a long chirp. Zones 2 and 4 are now bypassed.

Press  a fifth time within five seconds. The siren chirps five times followed by a long chirp. All input zones, except the ignition are now bypassed.



Note: Multi-level security arming only applies to a single arming cycle. Once the system is disarmed and then re-armed, all the zones will be active again.


Arming while driving

Your security system can be armed while driving the vehicle. Press  on the remote control for two seconds while the vehicle is running. The siren/horn will sound once to indicate that the security system is armed, and then once more to indicate that the ignition is on. The system will not respond to any input except the door triggers, and the starter kill relay (if installed) will not be activated. Once you have arrived at your destination, the system will disarm when the ignition is turned off. The siren/horn will sound twice and the LED will then stop flashing. The system can also be disarmed at any time by pressing .

High security disarm

This security system offers High Security Disarm. High Security Disarm is a feature that makes it possible to silence and reset the system while it is triggering, without disarming the system.

If the system is triggered and the siren has been sounding for longer than six seconds, pressing  on the remote silences the siren while keeping the system in the armed state. The system does not disarm, but resets. Pressing  again after silencing the system will disarm the system.

If the system is triggered and the siren has been sounding for less than six seconds, pressing  disarms the system. The six second timer is provided for your convenience, in case the system is accidentally triggered.

System Override

If your remote control is lost or damaged, you can manually disarm your vehicle security system or disable an optional starter kill. To disarm or disable the system without a remote control, you must have the vehicle's ignition key.

To disarm/disable the system:

1. Turn the ignition to the ON position.
2. Press the control center button the preset number of times (one to five times) within 15 seconds. The factory default setting is 1 press. After five seconds, the system will disarm/disable. If the system does not disarm/disable, you may have waited too long. Start over by turning the ignition off and on.

Number of Presses _____

Important: The control center button can be programmed to respond to 1-5 presses for the disarm/disable function. You must check with the installer to verify the programming for your individual unit.




Valet mode

You can prevent your system from automatically arming/locking and triggering by using Valet Mode. This is very useful when washing the vehicle or having it serviced. In Valet Mode, the system/starter kill will not arm/enable, even with the remote control, but all convenience functions (door locks, trunk release, etc.) will continue to work normally.

To enter or exit Valet Mode:

1. Turn the ignition on.
2. Turn the ignition off.
3. Press and release the control center button within 10 seconds.



To enter or exit Valet Mode using the remote control:

4. Open any vehicle door.
5. Press .
6. Press  and then press  again.

The status LED lights solidly if you are entering Valet Mode, and goes off when you exit Valet Mode.

Panic Mode

if you are threatened in or near your vehicle, you can attract attention by triggering the system with your remote control.

Press and **hold**  for two seconds. The siren sounds and the parking lights flash for the programmed siren duration. To stop panic made at any time, **press**  on the remote control again.

Remote start


This feature allows you to remotely start and run your vehicle for a programmable period of time. This makes it possible to warm up the engine, as well as adjust the interior temperature of the vehicle with

the climate control system. If interior heating or cooling is desired, the climate controls must be preset, and the fan blower must be set to the desired level prior to remote starting the vehicle.



Warning! (1) Never remote start your vehicle when the keys are in the ignition, except when performing Valet® Take-Over, and (2) Never start the vehicle if it is not in PARK or NEUTRAL

To remote start the vehicle:

- Press  on the remote control once.
The parking lights flash to confirm that the vehicle will attempt to start. With gas vehicles the engine starts 4 seconds after the parking lights flash. With diesel vehicles the engine starts when the WAIT-TO-START indicator on the dashboard goes out or the programmed delay has ended.
Once the vehicle has started, it runs for the pre-programmed period of time or until a shutdown input is triggered.




Warning! It is unsafe to operate a vehicle's motor in a garage or other closed off area. Breathing the exhaust from the vehicle is hazardous to your health. Never activate the remote start in an enclosed space.

When you are ready to drive the vehicle:



1. Insert the ignition key and turn it to the On position.
2. Press the brake pedal.

Note: If the brake pedal is pressed before the key is in the ON position, the engine will shut down.

While the vehicle is running during remote start operation, the system monitors the vehicle and automatically shuts down the engine if the system receives any of the following:




- The brake pedal is pressed
- The hood is opened
- The shutdown toggle switch is put into the Off position.
- Runtime (12, 24, or 60 minutes) expires
- Remote control button  is pressed once.

Optional rear window defogger

Pressing the ,  and **AUX** simultaneously activates/deactivates the optional rear window defogger. The parking lights flash two times and the rear defogger is no longer active when the vehicle is remote started. When the same procedure is repeated, the defogger activates and the parking lights flash three times. If the vehicle interior temperature is greater than 55°F when the remote start is activated, the rear defogger does not turn on.

Timer Mode

When you activate timer mode the system automatically starts the vehicle every three hours for a maximum of 6 starts. The pre-programmed engine runtime is 12 minutes.


- Press  and  to activate timer mode. The parking lights flash four times, and after a 1 second delay, the engine starts.
- To shutdown the engine, press the  button. The engine will shutdown while the system remains in timer mode and will continue to start every 3 hours until the system reaches the maximum amount of starts or is cancelled by turning on the ignition, activating the brake, or turning off the shutdown toggle switch.
- The parking lights flash 4 times indicating timer mode is exited.

Important! Timer Mode should be used only in open areas. Never start and run the vehicle in an enclosed space such as a garage or carport.



Short Run/Turbo Mode

Short run turbo mode keeps the engine running after arriving at your destination for a programmable period of 1, 3, 5 or 10 minutes. This allows the system's timer to conveniently cool down the turbo after you have left the vehicle.

To activate:

1. Park the vehicle and set the parking brake.
2. Remove your foot from the brake pedal and leave the engine running.
3. Press and release the  and **AUX** buttons at the same time. The lights will flash to indicate the remote start has entered short run turbo mode.
4. Turn off the key, the engine will keep running.
5. Exit and secure the vehicle. The engine will turn off after the programmed run time.

Temperature Start Mode


Pressing the ,  and **AUX** simultaneously activates the Temperature Start mode. The parking lights flash fast four times to confirm activation. The engine does not start once activated, it starts when the vehicle interior temperature drops below 0°F.

Deactivate Temperature Start mode by pressing the same buttons again or turning the vehicle ignition on. The parking lights flash slowly four times to confirm deactivation

Valet Take-Over

The Valet Take-Over feature allows the vehicle to remain running after the key has been removed from the ignition. This feature is useful for occasions when you wish to exit and lock the vehicle for short periods of time, but would like to leave the motor running and the climate controls on.

To perform Valet Take-Over:

1. Before turning off the engine, press and release  on the remote control (or press and release the optional momentary switch). Then wait five seconds.
2. Turn the ignition key to the OFF position. (The engine will stay running.) The engine will run until the pre-programmed time elapses or a shut-down input is received. (See the previous Remote Start section for a complete list of shut-down inputs.)

This feature will not work if the brake pedal is being pressed.

Safety features

This system has several important safety features to ensure proper operation of the motor and prevent accidental damage to the engine or its components.

Starter-anti-grind circuitry

Whenever the vehicle is remote started, advanced anti-grind circuitry prevents the starter from engaging, even if the key is turned to the start position. This prevents damage to the starter motor if the key is turned to the start position during remote start operation.

Important: The Fail Safe starter kill option must be installed for this feature to work.

Disabling the remote start system

This feature allows your system's remote start unit to be temporarily disabled to prevent the vehicle from being remote started accidentally. This feature is useful if the vehicle is being serviced or stored in an enclosed area. To disable the remote start, move the shutdown toggle switch to the OFF position. The switch can be installed in a location of your choice. Check with your installer for recommended locations. Location of Shutdown Switch_____

Shut down inputs

This security system uses several inputs to shut down the remote start operation of the motor or prevent remote start if certain inputs are active. The two most important are hood and brake inputs. The hood input will prevent the motor from starting, as well as shut it down, any time the hood is opened. The brake pedal will shut down the motor at any time during remote start operation, as well as preventing the remote start from activating while it is being pressed.

Diagnostics

The microprocessor at the heart of your system is constantly monitoring all of the switches and sensors connected to it. It is designed to detect any faulty switches and sensors and prevents them from disabling the entire system. The microprocessor will also record and report any triggers that occurred during your absence. Refer to the Table of Zones sections of this guide for diagnostic information.

Arming diagnostics

If the security system is armed at the same time that an input is active (such as a door opening or sensor triggering), you will hear one siren/horn sound to indicate arming and a second siren/horn sound to indicate Bypass Notification.

A Bypass Notification sound means that the security system ignores the input that was active when the system was armed, until that input ceases. For more information, please refer to the expanded version of this manual online at www.automatecarsecurity.com

Disarming diagnostics

Extra sounds that are heard when disarming the system are the Tamper Alert. If four sounds are heard when disarming the system, then the security system was triggered in your absence. If five sounds are heard when disarming the system, a zone was triggered so many times that the Nuisance Protection® Circuitry has bypassed that zone. For more information, please refer to the expanded version of this manual online at www.automatecarsecurity.com

Nuisance Prevention® Circuitry

Your system has Directed's Nuisance Prevention Circuitry (NPC). It

prevents annoying repetitive trigger sequences due to faulty door pin switches or environmental conditions such as thunder, jackhammers, airport noise, etc.

Example: If the alarm triggers three times within a 60-minute period and each time the same sensor or switch triggers the alarm, NPC will interpret those triggers as false alarms. After the third trigger, NPC ignores, or bypasses, that sensor or switch (along with any other sensors or switches sharing the same zone) for 60 minutes.

If the bypassed sensor tries to trigger the security system while it is being bypassed, the 60-minute bypass period will start over. This ensures that a sensor that is continually being triggered will remain bypassed. The vehicle doors are protected by NPC differently. If your security system is triggered by an open door for three full cycles, the system will bypass the doors until the trigger ceases.

Note: Arming and disarming the system does not reset this function. The only way to reset a bypassed zone is to not have it trigger for 60 minutes, or to turn on the ignition. If testing your system, remember that the NPC programming can cause zones to be bypassed and appear to stop working. If five chirps are heard when disarming, NPC has been engaged. If you wish to clear the NPC memory, turn the ignition on.

Table of zones

A zone is represented by the number of LED flashes used by the system to identify a particular type of input. Standard input assignments are listed in the following table, along with spaces to write in any optional sensors or switches that have been installed.

Zone	Description	Dealer installed options
1	Trunk Pin	
2	Instant trigger: a heavier impact detected by the shock sensor	
3	Door switch trigger	
4	Instant trigger: for optional sensors	
5	Ignition trigger	
6	Hood Pin	

Your system stores the last two triggered zones in memory. If your system has been triggered but the LED has been reset by turning on the ignition, your dealer can still recall the last two zones that were triggered. Contact your dealer for details.

Interpreting zone diagnostics

Warn Away responses are not reported by arming or disarming diagnostics. If you receive a Bypass notification when arming or a Tamper Alert notification when disarming, look at the LED in the vehicle. Active or triggered zones will be indicated by a pattern of blinks by the LED.

For example: If zone 3 was active or triggered, the LED will blink three times with a two-second pause. Then it will blink three times again, and repeat until the ignition is turned on.

Your system stores the last two triggered zones in memory. If your system has been triggered but the LED has been reset by turning on the ignition, your dealer can still recall the last two zones that were triggered. Contact your dealer for details.

Programming options

Programming options control your system's normal, operational set-up. Most options do not require additional parts, but some may require installation labor. See your authorized Directed dealer for more details.

The following is a list of the programmable options, with the factory settings in Bold.

- **Active arming** (transmitter only) or Passive arming (automatic arming 30 seconds after the last door has been closed).
- Arming/disarming siren chirps **On** or Off.
- The ignition controlled door lock feature On or **Off**: When this feature is programmed on, the doors will lock three seconds after the ignition is turned on, and unlock when the ignition is turned off. If your installer is programming the security system with the Directed Bitwriter, ignition lock and unlock are independent features that can be programmed separately.

Important: The vehicle doors must be closed for the ignition lock feature to work.

- Passive door locking (with passive arming) or **Active door locking** (only when arming with the transmitter). Passive locking allows the vehicle's doors to lock when the security system passively arms (after the 30-second countdown). This feature only works if passive arming has been programmed.
- Panic mode **Enabled**/Disabled when the ignition is turned on. (Some states have laws against sirens sounding in moving cars.)

- Forced passive arming **On** or Off. If your security system is programmed for passive arming and the forced passive arming feature has been programmed on, the system will passively arm after one hour, even if a protected entry has been left open. Forced passive arming ensures that the system will be armed if a door has accidentally been left ajar when leaving the vehicle.

When the system passively arms after one hour, the entry point that has been left open, and anything connected to the same zone, is bypassed and cannot trigger the system. However, the remaining inputs to the system are fully operational.

- Full trigger response **30** or **60** seconds: This determines how long the full triggered sequence lasts. Some states have laws regulating how long a security system can sound before it is considered a nuisance.

If your installer is programming the security system with the Directed Bitwriter, the full triggered response can be programmed for any duration ranging from 1 to 180 seconds.

- Siren tones and chirp volume. The output of the Revenger™ Soft Chirp™ siren consists of six different tones in sequence. Any of these tones can be eliminated by a dealer, resulting in a unique, easily identifiable siren sound. The chirps can be either full volume or 6 decibels quieter than the full alarm blast.
- **12, 24, or 60** minute run time. your system can be programmed to allow the vehicle to run for 12, 24, or 60 minutes when remote started. Can be set up to minute increments by your installer.

Note: If your installer is programming the system with the Bitwriter,® the remote start run time may be programmed for any duration ranging from 1 to 60 minutes.

- 3, 6, 9, or **12** minute timer mode run time. Your system can be programmed to allow the vehicle to run for 3, 6, 9, or 12 minutes when remote started in timer mode. Can be set from 1 to 16 minutes by your installer.
- While the remote start is running the engine, the parking lights Flash on and off, or **Come on steadily**.
- Comfort closure is a programming option which closes the vehicle's windows after remote locking.

Government Regulations

This device complies with Part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesirable operation.

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television, which can be determined by turning the equipment OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

This device complies with the Industry Canada Radio Standards Specification RSS 210. Its use is authorized only on a no-interference, no-protection basis; in other words, this device must not be used if it is determined that it causes harmful interference to services authorized by IC. In addition, the user of this device must accept any radio interference that may be received, even if this interference could affect the operation of the device.

Warning:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

Warning! Safety First

The following safety warnings must be observed at all times:
Due to the complexity of this system, installation of this product must only be performed by an authorized Directed dealer.

When properly installed, this system can start the vehicle via a command signal from the remote control/transmitter. Therefore, never operate the system in an enclosed area or partially enclosed area without ventilation (such as a garage). When parking in an enclosed or partially enclosed area or when having the vehicle serviced, the remote start system must be disabled using the installed toggle switch. It is the user's sole responsibility to properly handle and keep out of reach from children all remote control/transmitters to assure that the system does not unintentionally remote start the vehicle. THE USER MUST INSTALL A CARBON MONOXIDE DETECTOR IN OR ABOUT THE LIVING AREA ADJACENT TO THE VEHICLE. ALL DOORS LEADING FROM ADJACENT LIVING AREAS TO THE ENCLOSED OR PARTIALLY ENCLOSED VEHICLE STORAGE AREA MUST AT ALL TIMES REMAIN CLOSED. These precautions are the sole responsibility of the user.

Use of this product in a manner contrary to its intended mode of operation may result in property damage, personal injury, or death. (1) Never remotely start the vehicle with the vehicle in gear, and (2) Never remotely start the vehicle with the keys in the ignition. The user must also have the neutral safety feature of the vehicle periodically checked, wherein the vehicle must not remotely start while the car is in gear. This testing should be performed by an authorized Directed dealer in accordance with the Safety Check outlined in the product installation guide. If the vehicle starts in gear, cease remote start operation immediately and consult with the authorized Directed dealer to fix the problem.

After the remote start module has been installed, contact your authorized dealer to have him or her test the remote start module by performing the Safety Check outlined in the product installation guide. If the vehicle starts when performing the Neutral Safety Shutdown Circuit test, the remote start unit has not been properly installed. The remote start module must be removed or the installer must properly reinstall the remote start system so that the vehicle does not start in gear. All installations must be performed by an authorized Directed dealer.

OPERATION OF THE REMOTE START MODULE IF THE VEHICLE STARTS IN GEAR IS CONTRARY TO ITS INTENDED MODE OF OPERATION. OPERATING THE REMOTE START SYSTEM UNDER THESE CONDITIONS MAY RESULT IN PROPERTY DAMAGE OR PERSONAL INJURY. YOU MUST IMMEDIATELY CEASE THE USE OF THE UNIT AND SEEK THE ASSISTANCE OF AN AUTHORIZED DIRECTED DEALER TO REPAIR OR DISCONNECT THE INSTALLED REMOTE START MODULE. DIRECTED WILL NOT BE HELD RESPONSIBLE OR PAY FOR INSTALLATION OR REINSTALLATION COSTS.

Caution

This product is designed for fuel injected, automatic transmission vehicles only. Use of this product in a standard transmission vehicle is dangerous and contrary the product's intended use.

Patent Information

This product is covered by one or more of the following U.S. patents:

303,223	345,711	4,383,242	5,103,221	5,534,845	5,907,195
333,633	347,190	4,438,426	5,117,217	5,572,185	5,914,667
333,634	348,622	4,553,127	5,132,660	5,646,591	5,945,936
333,635	352,685	4,584,569	5,193,141	5,656,997	5,952,933
333,636	383,689	4,794,368	5,245,694	5,712,638	5,990,786
333,795	383,690	4,887,064	5,285,186	5,783,989	6,093,979
340,000	390,830	4,897,630	5,315,285	5,798,711	
344,905	392,944	4,922,224	5,357,560	5,872,519	
345,317	4,327,444	4,987,402	5,532,670	5,900,806	

International Patents:

Australia: 694,925

Canada: 1,315,859 and 2,067,099

Taiwan: 91817

Other patents pending

Limited lifetime consumer warranty

Directed Electronics. ("Directed") promises to the original purchaser to repair or replace (at Directed's election) with a comparable reconditioned model any Directed unit (hereafter the "unit"), excluding without limitation the siren, the remote transmitters, the associated sensors and accessories, which proves to be defective in workmanship or material under reasonable use during the lifetime of the vehicle provided the following conditions are met: the unit was purchased from an authorized Directed dealer, the unit was professionally installed and serviced by an authorized Directed dealer; the unit will be professionally reinstalled in the vehicle in which it was originally installed by an authorized Directed dealer; and the unit is returned to Directed, shipping prepaid with a legible copy of the bill of sale or other dated proof of purchase bearing the following information: consumer's name, telephone number and address; the authorized dealers name, telephone number and address; complete product description, including accessories; the year, make and model of the vehicle; vehicle license number and vehicle identification number. All components other than the unit, including without limitation the siren, the remote transmitters and the associated sensors and accessories, carry a one-year warranty from the date of purchase of the same. ALL PRODUCTS RECEIVED BY DIRECTED FOR WARRANTY REPAIR WITHOUT PROOF OF PURCHASE WILL BE DENIED. This warranty is non-transferable and is automatically void if: the original purchaser has not completed the warranty card and mailed it within ten (10) days from the date of purchase to the address listed on the card; the unit's date code or serial number is defaced, missing or altered; the unit has been modified or used in a manner contrary to its intended purpose; the unit has been damaged by accident, unreasonable use, neglect, improper service, installation or other causes not arising out of defects in materials or construction. The warranty does not cover damage to the unit caused by installation or removal of the unit. Directed, in its sole discretion, will determine what constitutes excessive damage and may refuse the return of any unit with excessive damage.

TO THE MAXIMUM EXTENT ALLOWED BY LAW, ALL WARRANTIES, INCLUDING BUT NOT LIMITED TO EXPRESS WARRANTY, IMPLIED WARRANTY, WARRANTY OF MERCHANTABILITY, FITNESS FOR PARTICULAR PURPOSE AND WARRANTY OF NON-INFRINGEMENT OF INTELLECTUAL PROPERTY, ARE EXPRESSLY EXCLUDED; AND DIRECTED NEITHER ASSUMES NOR AUTHORIZES ANY PERSON OR ENTITY TO ASSUME FOR IT ANY DUTY, OBLIGATION OR LIABILITY IN CONNECTION WITH ITS PRODUCTS. DIRECTED DISCLAIMS AND HAS ABSOLUTELY NO LIABILITY FOR ANY AND ALL ACTS OF THIRD PARTIES INCLUDING ITS AUTHORIZED DEALERS OR INSTALLERS. DIRECTED SECURITY SYSTEMS, INCLUDING THIS UNIT, ARE DETERRENTS AGAINST POSSIBLE THEFT. DIRECTED IS NOT OFFERING A GUARANTEE OR INSURANCE AGAINST VANDALISM, DAMAGE OR THEFT OF THE AUTOMOBILE, ITS PARTS OR CONTENTS; AND HEREBY EXPRESSLY DISCLAIMS ANY LIABILITY WHATSOEVER, INCLUDING WITHOUT LIMITATION, LIABILITY FOR THEFT, DAMAGE AND/OR VANDALISM. THIS

WARRANTY DOES NOT COVER LABOR COSTS FOR MAINTENANCE, REMOVAL OR REINSTALLATION OF THE UNIT OR ANY CONSEQUENTIAL DAMAGES OF ANY KIND. IN THE EVENT OF A CLAIM OR A DISPUTE INVOLVING DIRECTED OR ITS SUBSIDIARY, THE VENUE SHALL BE SAN DIEGO COUNTY IN THE STATE OF CALIFORNIA. CALIFORNIA STATE LAWS AND APPLICABLE FEDERAL LAWS SHALL APPLY AND GOVERN THE DISPUTE. THE MAXIMUM RECOVERY UNDER ANY CLAIM AGAINST DIRECTED SHALL BE STRICTLY LIMITED TO THE AUTHORIZED DIRECTED DEALER'S PURCHASE PRICE OF THE UNIT. DIRECTED SHALL NOT BE RESPONSIBLE FOR ANY DAMAGES WHATSOEVER, INCLUDING BUT NOT LIMITED TO, ANY CONSEQUENTIAL DAMAGES, INCIDENTAL DAMAGES, DAMAGE TO VEHICLE, DAMAGES FOR THE LOSS OF TIME, LOSS OF EARNINGS, COMMERCIAL LOSS, LOSS OF ECONOMIC OPPORTUNITY AND THE LIKE. NOTWITHSTANDING THE ABOVE, THE MANUFACTURER DOES OFFER A LIMITED WARRANTY TO REPLACE OR REPAIR THE CONTROL MODULE SUBJECT TO THE CONDITIONS AS DESCRIBED HEREIN. THIS WARRANTY IS VOID IF THE UNIT HAS NOT BEEN PURCHASED FROM DIRECTED, OR AN AUTHORIZED DIRECTED DEALER, OR IF THE UNIT HAS BEEN DAMAGED BY ACCIDENT, UNREASONABLE USE, NEGLIGENCE, ACTS OF GOD, NEGLIGENCE, IMPROPER SERVICE, OR OTHER CAUSES NOT ARISING OUT OF DEFECT IN MATERIALS OR CONSTRUCTION.

Some states do not allow limitations on how long an implied warranty will last or the exclusion or limitation of incidental or consequential damages. This warranty gives you specific legal rights and you may also have other rights that vary from State to State.

This warranty is only valid for sale of product(s) within the United States of America. Product(s) sold outside of the United States of America are sold "AS-IS" and shall have NO WARRANTY, express or implied. This product may be covered by a Guaranteed Protection Plan ("GPP"). See your authorized Directed dealer for details of the plan or call Directed Customer Service at 1-800-876-0800.

Make sure you have all of the following information from your authorized Directed dealer:

A clear copy of the sales receipt, showing the following:

- o Date of purchase
- o Your full name and address
- o Authorized dealer's company name and address
- o Type of alarm installed
- o Year, make, model and color of the automobile
- o Automobile license number
- o Vehicle identification number
- o All security options installed on automobile
- o Installation receipts

920-0003 06-06

The company behind this system is Directed Electronics

Since its inception, Directed Electronics has had one purpose, to provide consumers with the finest vehicle security and car stereo products and accessories available. The recipient of nearly 100 patents and Innovations Awards in the field of advanced electronic technology, DIRECTED is ISO 9001 registered.

Quality Directed Electronics products are sold and serviced throughout North America and around the world.

Call (800) 274-0200 for more information about our products and services.



Directed Electronics is an ISO 9001 registered company.

Directed Electronics is committed to delivering world class quality products and services that excite and delight our customers.

driven to excel
Directed
ELECTRONICS

Directed Electronics
Vista, CA 92081
www.directed.com

© 2010 Directed Electronics—All rights reserved
GADSS5003 2010-08